# INSTRUCTION / MAINTENANCE MANUAL

# Imaging Tables

made in the USA
with US & imported parts

**CFPMFXH**
integrated headrest top

**CFPMFXH**
rectangular top

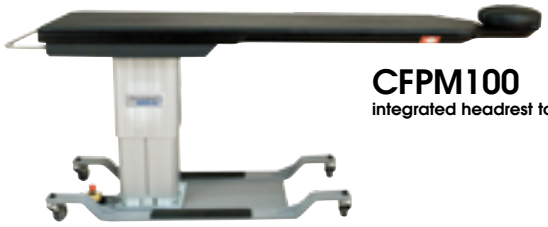

**CFPM100**
integrated headrest top

**CFPM100**
rectangular top

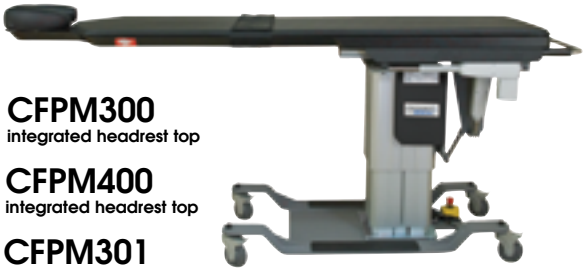

**CFPM300**
integrated headrest top

**CFPM400**
integrated headrest top

**CFPM301**
integrated headrest top

**CFPM401**
integrated headrest top

**CFPM300**
rectangular top

**CFPM400**
rectangular top

**CFPM301**
rectangular top

**CFPMB301**
rectangular top - Bariatric Version

**CFPM401**
rectangular top

**CFUR301**
Urology Table

**CFUR401**
Urology Table

**CFLU401**
Lithotripsy Table

OAKWORKS® MEDICAL

© Copyright 2007
OAKWORKS®, Inc.

Notice

The information contained in this document is subject to change without notice and should not be construed as a commitment by OAKWORKS®, Inc.

OAKWORKS®, Inc. assumes no responsibility for any errors that may appear in this document nor does it make expressed or implied warranty of any kind with regard to this material, including, but not limited to, the implied warranties of merchantability and fitness for a particular purpose.

OAKWORKS®, Inc. shall not be liable for incidental or consequential damages in connection with or arising out of the furnishing, performance, or use of this document and the program material which it describes.

Printed in U.S.A.

All rights are reserved. No part of this document may be photocopied, reproduced or translated to another language without prior written consent of OAKWORKS®, Inc.

OAKWORKS® is a registered trademark of OAKWORKS®, Inc.

**Symbol Identification** ..... 1

**Indications & Contraindications** ..... 2

**Warnings & Precautions** ..... 2-3

**Section I: Product Description & Photo**

CFPMFXH Integrated Headrest & Rectangular Top ..... 4
CFPM100 Integrated Headrest & Rectangular Top ..... 5
CFPM300 Integrated Headrest & Rectangular Top ..... 6
CFPM400 Integrated Headrest & Rectangular Top ..... 7
CFPM301 Integrated Headrest & Rectangular Top ..... 8
CFPMB301 Bariatric Top ..... 9
CFPM401 Integrated Headrest & Rectangular Top ..... 10
CFLU401 Lithotripsy Top ..... 11
CFUR301 Urology Top ..... 12
CFUR401 Urology Top ..... 13

**Section II: Directions for Use**

Foot Controls ..... 14
Hand Controls ..... 15
Bubble Levels, Angle Indicator & Patient Positioning Strap ..... 16
Adjusting Table Top Pad ..... 17
Adjusting Cranial Positioning Pads (integrated headrest only) ..... 17
Moving the Imaging Table ..... 18
Emergency Stop ..... 18
Weight Capacity & Patient Use ..... 19
Urology Table Bag Hoop ..... 20
Lithotripsy/Urology & Urology Table End Extensions ..... 21
Lithotripsy/Urology Table Lateral Extensions ..... 22
Lithotripsy Table used as Urology Table ..... 23
Urology Table Lateral Extensions ..... 24

**Section III: Reference** - Usable Imaging Area Diagrams

CFPMFXH & CFPM100 - integrated headrest tops ..... 25
CFPMFXH & CFPM100 - rectangular tops ..... 26
CFPM400,CFPM300, CFPM401 & CFPM301
- integrated headrest tops ..... 27
CFPM400,CFPM300, CFPM401, CFPM301 & CFPMB301
- rectangular tops ..... 28
CFUR301 & CFUR401 - Urology top ..... 29
CFLU401 - Lithotripsy/Urology top ..... 30

**Section IV: Optional Accessories**

Carbon Fiber Arm Board ..... 31
Adjustable T-Rail Clamp ..... 31
Spine Positioning System ..... 32
Fluoro Extender ..... 32

**Section V: Maintenance & Service**


Cleaning ..... 33
Inspection & Maintenance ..... 33
Ground Point Testing ..... 34
Troubleshooting ..... 34 & 35
Foot and Hand Control Replacement ..... 35
Warranty Information ..... 36
Parts Identification ..... 36 & 37
Wiring Diagram ..... 38
Model & Serial Number Location ..... 38
Model Number Chart ..... 39
Specifications
- Product & Electrical Specifications ..... 40
- Guidance & Manufacturers Declaration - Emissions (all systems) ..... 41
- Recommended Separations - Distances from the CFPM400 ..... 41
- Guidance & Manufacturers Declaration - Immunity ..... 42
- Guidance & Manufacturers Declaration - Emmissions (Equipment that is NOT life supporting) ..... 43

**Contact Information** ..... Back Cover

This symbol, when used in this manual and on product labels, represents a caution warning. Be sure to read and comply with all precautions and warnings.

This symbol, when used in this manual and on product labels, warns against an electrical shock hazard. Be sure to observe and comply with all warnings.

This symbol, when used in this manual and on product labels, indicates the potential of exposure to harmful x-rays. Be sure to read and comply with all warnings.

This symbol, when used in this manual and on product labels, indicates that the table and components are a Type B Applied Part pursuant to IEC 601.1 and EN 60601-1: 1990.

This symbol, when used in this manual or on product labels, indicates a Protective Earth (Ground) Terminal.

This symbol when used in this manual or on product labels, warns that during transport there should be no stacking of containers.

This symbol, when used in this manual or on product labels, indicates that the product should be protected from moisture. The humidity specifications for Transport & Storage are listed on page 40.

This symbol, when used in this manual or on product labels, indicates that information is given regarding the recommended temperature limits during transport and storing.

This symbol, when used in this manual or on product labels, indicates the date of manufacture of the device.

This symbol, when used in this manual or on product labels, indicates alternating current (AC).

This symbol, when used in this manual or on product labels, indicates direct current (DC).

## PRODUCT DESCRIPTION

OAKWORKS® Imaging Tables are radiographic tables intended for use with mobile or compact stationary C-arm Imaging Systems. It is ideally suited for pain management imaging and therapeutic procedures. These tables are suitable to use for diagnostic x-ray imaging and imaging during therapeutic procedures such as spinal injections, vertebroplasty procedures and other pain management procedures. The CFLU & CFUR Tables are designed for Lithotripsy and Urology procedures.

## CONTRAINDICATIONS

The OAKWORKS® Imaging Tables should not be used with Imaging systems having intensifier screens or film cassettes larger than 12 inches (30 cm) when an oblique angle of view is being used.

The tables are not designed for and should not be used with Magnetic Resonance Imaging procedures.

## CAUTIONS & WARNINGS

After unpacking your OAKWORKS® Imaging Table, inspect it thoroughly for damage. If you suspect a problem do not use the table and call our customer service department at 800-916-4612.

Improper use of this device can cause injury. Be sure to read all operating instructions prior to use.

Weight limit (patient and accessories):

Carbon Fiber Top: 340 kg / 500 lbs. distributed evenly.
Bariatric Table only: 550 kg / 750 lbs. distributed evenly.
Do not sit beyond warning line on carbon fiber top.
Lock casters when mounting and dismounting.

The table utilizes four locking casters to permit movement of the table within the imaging suite. Accidental movement of the table may occur. Lock casters prior to accomplishing imaging of the patient.

There may be pinch points under the table top. Do not have any body part under the top when the table is in motion.

Be certain that the table is completely lowered prior to discharging an ambulatory patient. The patient may lose balance and fall. NOTE: The CFPMFXH is a fixed height table. It is recommended that all patients are assisted onto the table (physical assistance & step stools with side rails is recommended.)

Patient Safety Strap must be secured prior to using the OAKWORKS® Imaging Tables.

## CAUTIONS & WARNINGS: (CONT.)

Electrical Shock Hazard. (Excluding CFPMFXH) The power supply/control module is located inside lifting column and under the top. No user serviceable parts are inside. Refer servicing to qualified personnel. Unplug wall connector prior to contact with any cables connected to the power supply.

Disconnect the power supply plug prior to cleaning any surfaces below or inside of the base of the table.

Grounding reliability can only be achieved when this equipment is connected to an equivalent 3 prong receptacle marked “Hospital Only” or “Hospital Grade”.

Medical Electrical Equipment needs special precautions regarding EMC and needs to be installed and put into service according to the EMC information provided in the specifications at the end of this manual. (Excluding CFPMFXH)

Portable and Mobile RF Communications Equipment can affect Medical Electrical Equipment. (Excluding CFPMFXH)

The Table should not be used adjacent to or stacked with other equipment due to the risk of electronic interference. If adjacent or stacked use is necessary, the table should be observed to verify normal operation in the configuration in which it will be used. (Excluding CFPMFXH)

This table is not suitable for use in the presence of flammable anesthetic mixture with air or oxygen or nitrous oxide.

The potential of exposure to harmful x-rays exists when this table is in use. The use of adequate x-ray barrier devices is necessary to provide protection to both the operator and the patient. X-ray barrier devices are recommended for the patient outside of the intended target area to prevent exposure to scattered radiation from the x-ray generating source.

The tabletop has a typical aluminum filtration equivalence of 1.10 mm as measured at 100 kVp and a half value (HVL) of 3.6 mm. (NOTE: Bariatric Top has a typical aluminum filtration equivalence of 1.50 mm. as measured at 100 kVp and a half value (HVL) of 3.6 mm.)

- Oakworks® Imaging Tables may be used for x-ray imaging where the x-ray generator is located below the tabletop and the image receptor is located above the tabletop. This is the recommended method. The tables may also be used for x-ray imaging where the x-ray generator is located above the tabletop and the image receptor is located below the tabletop. This application will result in greater patient exposure to x-rays. The operator must weigh this issue with the imaging requirements and patient exposure issues.
- The Imaging Tables may be used with the x-ray generator above the tabletop and a film cassette located on the tabletop. (See contraindications regarding film cassette size.)
- The x-ray generator should never be located above the tabletop when the Oakworks® Imaging Table and the Oakworks® Spine Positioning System/ Prone Pillow are used together. This type of use requires that the x-ray generator is located below the tabletop and the imaging intensifier or film cassette located above the tabletop.

# PRODUCT DESCRIPTION - CFPMFXH (MODEL: FLFD)
# 22" X 84" INTEGRATED HEADREST TOP

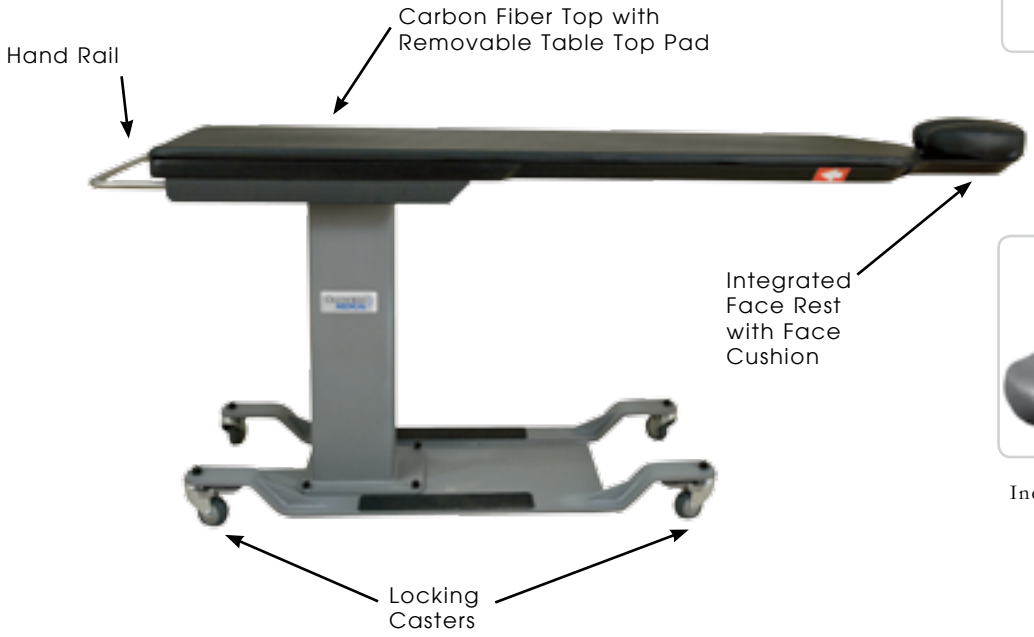


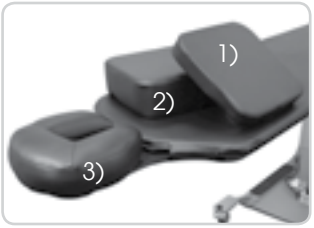


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

## Table Specs :

- Height: 37" (91 cm) (optional heights are available)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 368 lbs. (167 kg.) shipping 500 lbs.(227 kg.)
- Included options & Accessories: 4" Casters, Patient Positioning Strap, Table Top Pad with 1" Comfort Foam Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1- 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only
- Table Options: 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad, Adjustable T-rail clamp
- Motions: None

## CAUTION

The CFPMFXH is a fixed height table. It is recommended that all patients are assisted onto the table (physical assistance & step stools with side rails is recommended.)

# PRODUCT DESCRIPTION - CFPM100 (MODEL: FL10)
# 22" X 84" INTEGRATED HEADREST TOP

**24" X 80" RECTANGULAR TOP**

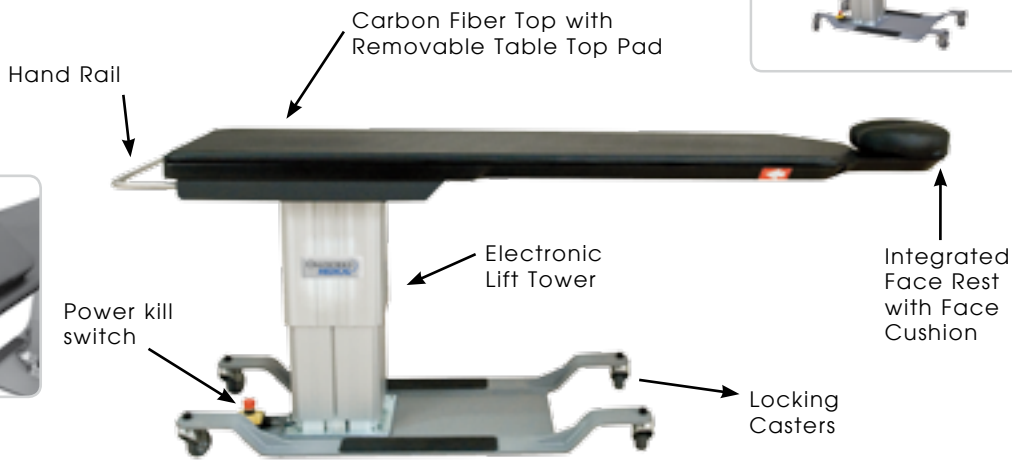


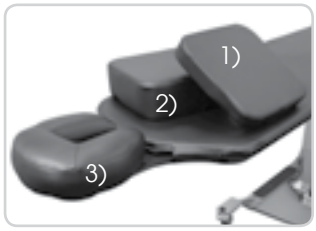


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

## Table Specs :

- Height Range: 22" - 40" (56 cm - 102 cm)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 343 lbs. (146 kg.) shipping 475 lbs.(215 kg.)
- Controls: 1 foot control
- Included options & Accessories: 4" Casters, Patient Positioning Strap, Table Top Pad with 1"Comfort Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1 - 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only

- Table Options: International Electric Configurations, 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad, Adjustable T-rail clamp
- Motions: Vertical Motion

# PRODUCT DESCRIPTION - CFPM300 (MODEL: FL30)
# 22" X 84" INTEGRATED HEADREST TOP

**24" X 80" RECTANGULAR TOP**

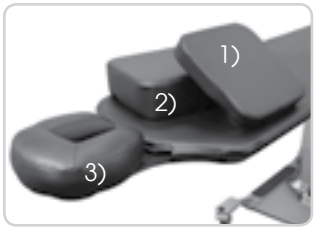


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

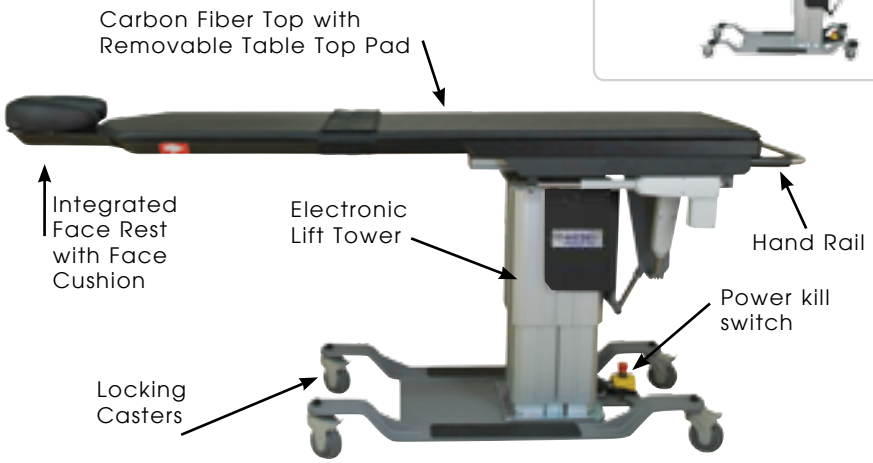


## Table Specs :

- Height Range: 26" - 44" (66 cm - 112 cm)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 498 lbs. (226 kg.) shipping 630 lbs.(286 kg.)
- Controls: 3 motion foot control & 3 motion hand control
- Included options & Accessories: Patient Positioning Strap, 4" Casters, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1 - 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only
- Table Options: International Electric Configurations, 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad, Adjustable T-rail clamp
- Motions: Vertical, Trendelenburg (+15°/-12°), Lateral Tilt (±15°)

# PRODUCT DESCRIPTION - CFPM400 (MODEL: FL40)
# 22" X 84" INTEGRATED HEADREST TOP

**24" X 80" RECTANGULAR TOP**

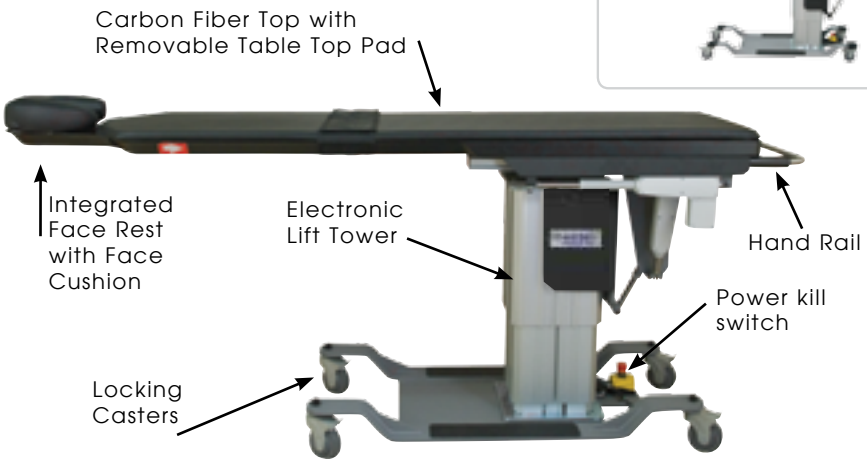


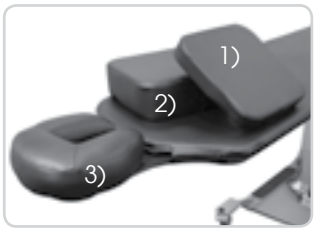


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

## Table Specs :

- Height Range: 26" - 44" (66 cm - 112 cm)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 498 lbs. (226 kg.) shipping 630 lbs.(286 kg.)
- Controls: 4 motion foot control & 4 motion hand control
- Included options & Accessories: Patient Positioning Strap, 4" Casters, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1 - 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only
- Table Options: International Electric Configurations, 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad, Adjustable T-rail clamp
- Motions: Vertical, Trendelenburg (+15°/-12°), Lateral Tilt (±15°), Longitudinal (10")

# PRODUCT DESCRIPTION - CFPM301 (MODEL: FL31)
# 22" X 84" INTEGRATED HEADREST TOP

**24" X 80" RECTANGULAR TOP**

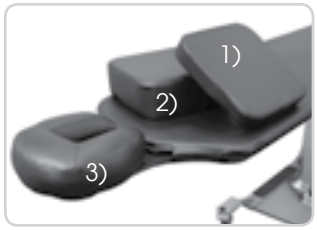


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

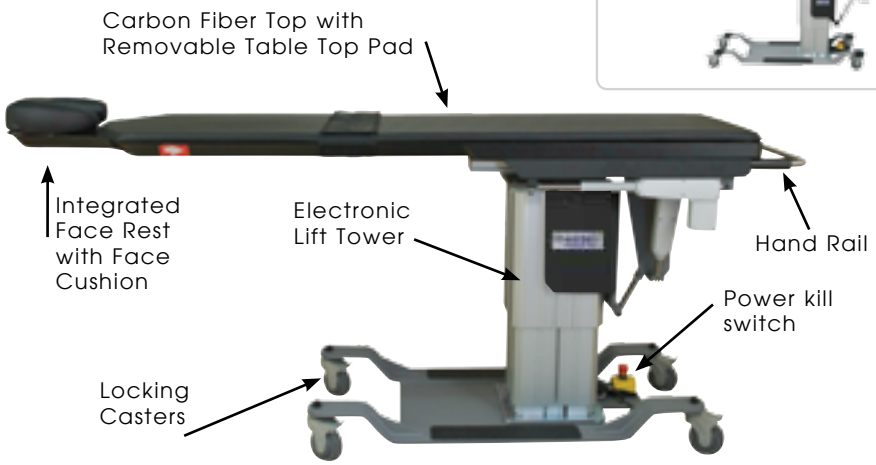


## Table Specs :

- Height Range: 25" - 43" (64 cm - 109 cm)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 538 lbs. (244 kg.) shipping 670 lbs.(304 kg.)
- Controls: 3 motion foot control & 3 motion hand control
- Included options & Accessories: Patient Positioning Strap, 4" Casters, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1 - 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only
- Table Options: International Electric Configurations, 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad Adjustable T-rail clamp
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10")

# PRODUCT DESCRIPTION - CFPMB301 (MODEL: FLBABA)
# 24” X 80” BARIATRIC TOP

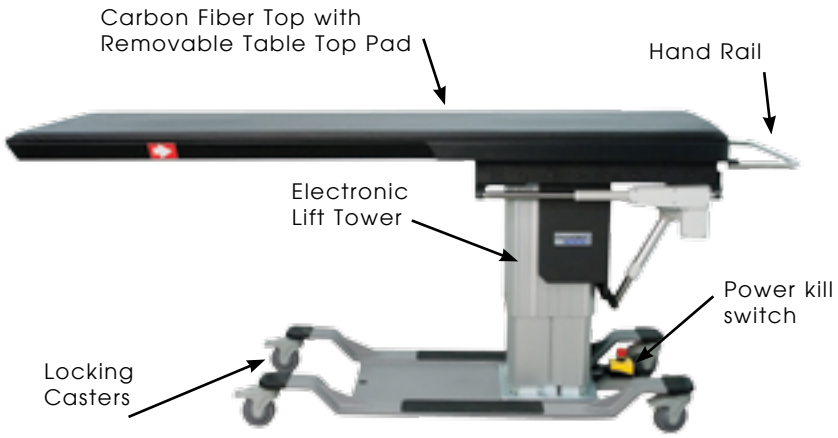


## Table Specs :

- Height Range: 26” - 44” (66 cm - 112 cm)
- Top: 24” (56 cm) x 80” (203 cm)
- Patient Capacity: 750 lbs.(340 kg.) distributed evenly
- Table Weight: 573 lbs. (260 kg.)
  shipping 705 lbs.(320 kg.)
- Controls: 3 motion foot control & 3 motion hand control
- Included options & Accessories: Patient Positioning Strap, 5” Casters, Table Top Pad with 1” Comfort Foam & TerraTouch™ Fabric
- Table Options: International Electric Configurations
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2” Table top pad
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10”)

# PRODUCT DESCRIPTION - CFPM401 (MODEL: FL41)
# 22" X 84" INTEGRATED HEADREST TOP

**24" X 80" RECTANGULAR TOP**

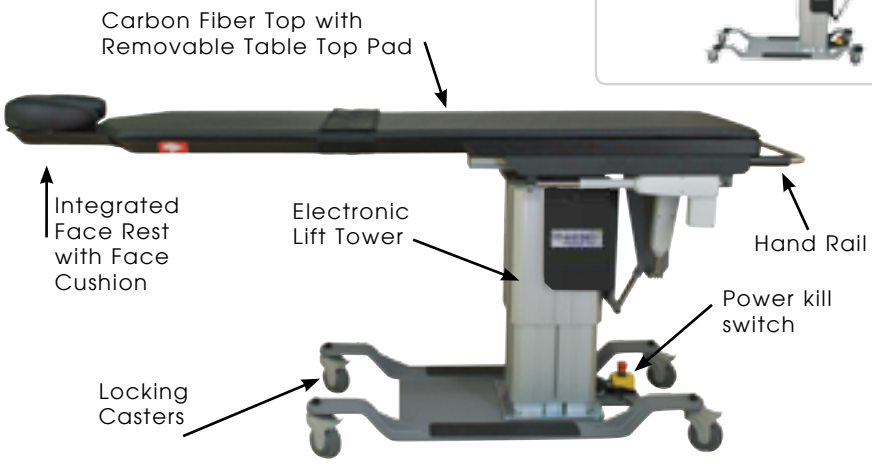


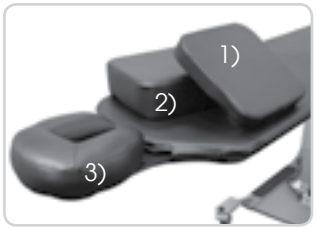


Includes 3-pad Set:
1) 2"H x 12"SQ Pad
2) 4"H x 12"SQ Pad
3) Crescent Face Pad

## Table Specs :

- Height Range: 26" - 44" (66 cm - 112 cm)
- Top: Integrated Headrest 22" (56 cm) x 84" (214 cm) or Rectangular 24" (61 cm) x 80" (203 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 548 lbs. (249 kg.) shipping 680 lbs.(308 kg.)
- Controls: 4 motion foot control & 4 motion hand control
- Included options & Accessories: Patient Positioning Strap, 4" Casters, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric

  1- 2"H x 12" SQ Head Rest Pad
  1 - 4"H x 12" SQ Head Rest Pad
  1 - Crescent Face Pad
  } Integrated Headrest Top Only

- Table Options: International Electric Configurations, 5" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender, 2" Table top pad, Adjustable T-rail clamp
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10") Lateral (±4")

# PRODUCT DESCRIPTION - CFLU401 (MODEL: FL41LI) LITHOTRIPSY/UROLOGY TOP

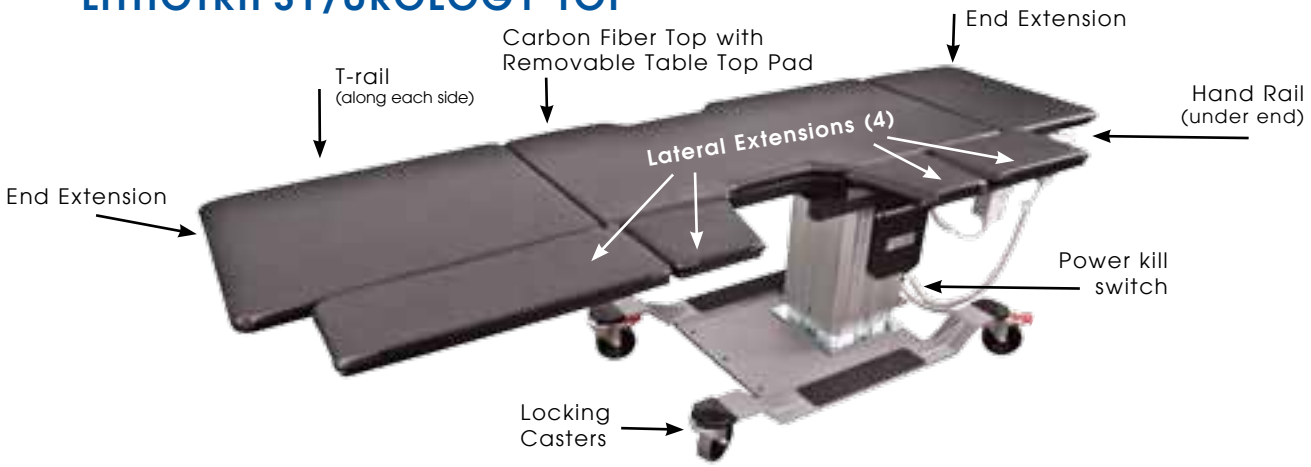


## Table Specs :

- Height Range: 27" - 45" (69 cm - 114 cm)
- Width: 23" (58 cm) - *Note: 19" radiolucent width*
- Length: Main Table: 47" (119cm) *Note: 23.7" radiolucent length*
  Extensions: 28" (71cm), 16" (41cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly on main top
  200 lbs.(91 kg.) on all extensions
- Table Weight: 618 lbs. (280 kg.)
  shipping 750 lbs.(340 kg.)
- Controls: 4 motion foot control & 4 motion hand control
- Included: Patient Positioning Strap, Urology Bag Hoop, 5" Casters, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric
  *Note: The Integrated T-Rails are US standard size of .375" (9.5mm) thick by 1.125" (28.6mm) wide.*

  1- 23" x 28" End Extension (Cantilevered End)
  1- 23" x 16" Short End Extension (Support Tower End) **OR**
  23" x 20" Short End Extension (Support Tower End)
  2 - 8" x 11" Lateral Extensions
  1 - 8" x 14" Lateral Extension
  1 - 8" x 24" Lateral Extension
  T-Rails on both sides of top (excluding Litho openings)
- Table Options: International Electric Configurations , 4" Casters
- Accessories: Carbon fiber arm board, Spine Positioning System, Fluoro-Extender
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10")
  Lateral (±4")

# PRODUCT DESCRIPTION - CFUR301 (MODEL: FL31UR)
# UROLOGY TOP

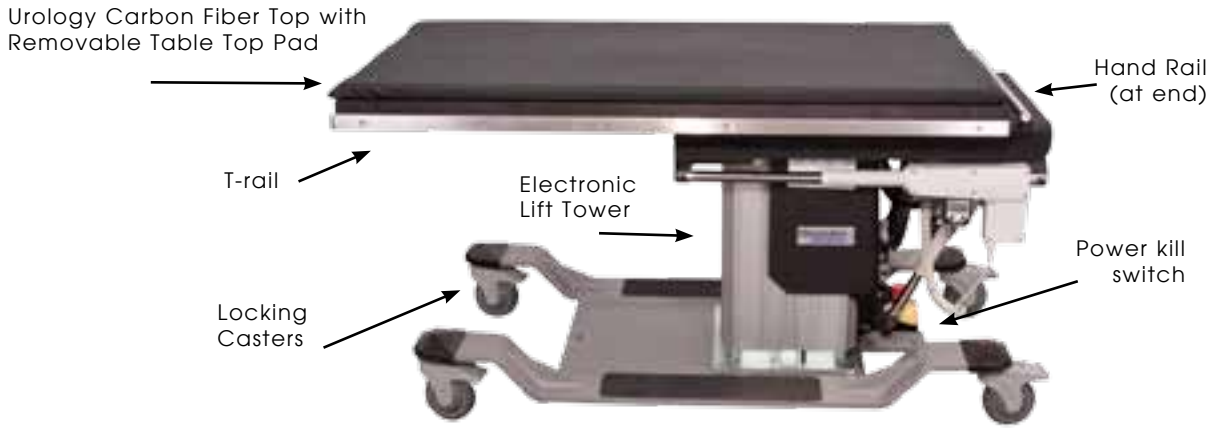


## Table Specs :

- Height Range: 26" - 44" (66 cm - 112 cm)
- Width: 23" (58 cm) - *Note: 19" radiolucent width*
- Length: 47" (119 cm) - *Note: 23.7" radiolucent length*
  Extension: 28" (71 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 568 lbs. (258 kg.)
  shipping 700 lbs.(318 kg.)
- Controls: 3 motion foot control & 3 motion hand control
- Included: (2) Patient Positioning Straps, 47" T-rails on both sides of top, 4" Casters, Urology Bag Hoop, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric
  (2) - 5"x 24" Lateral Extensions
  (1)- 23" x 28" End Extension
  *Note: The Integrated T-Rails are US standard size of .375" (9.5mm) thick by 1.125" (28.6mm) wide.*
- Table Options: International Electric Configurations, 5" Casters
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10")

# PRODUCT DESCRIPTION - CFUR401 (MODEL: FL41UR)
# UROLOGY TOP

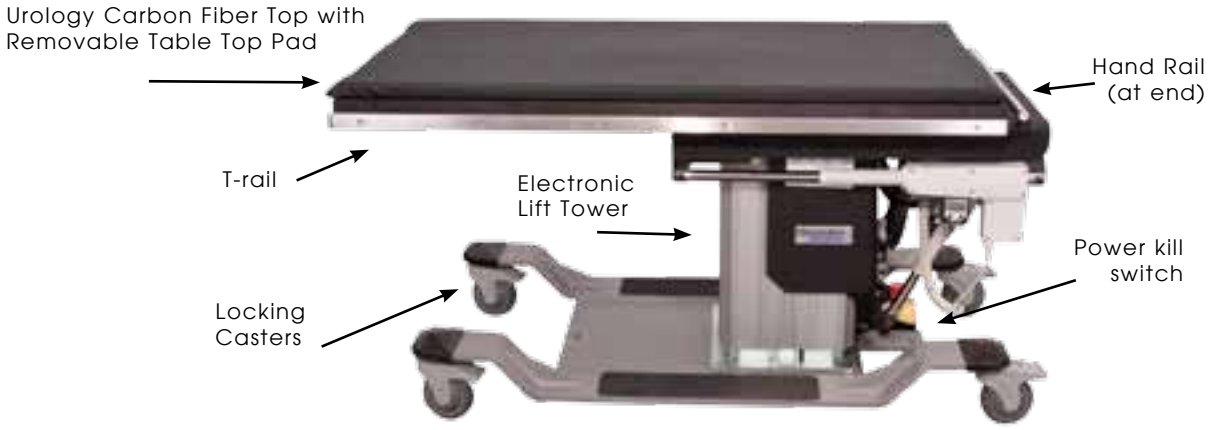


## Table Specs :

- Height Range: 27" - 45" (69 cm - 114 cm)
- Width: 23" (58 cm) - *Note: 19" radiolucent area*
- Length: 47" (119 cm) - *Note: 23.7" radiolucent length*
  Extension: 28" (71 cm)
- Patient Capacity: 500 lbs.(227 kg.) distributed evenly
- Table Weight: 590 lbs. (268 kg.)
  shipping 722 lbs.(327 kg.)
- Controls: 4 motion foot control & 4 motion hand control
- Included: (2) Patient Positioning Straps, 47" T-rails on both sides of top, 4" Casters, Urology Bag Hoop, Table Top Pad with 1" Comfort Foam & TerraTouch™ Fabric
  (2) - 5"x 24" Lateral Extensions
  (1)- 23" x 28" End Extension
  *Note: The Integrated T-Rails are US standard size of .375" (9.5mm) thick by 1.125" (28.6mm) wide.*
- Table Options: International Electric Configurations, 5" Casters
- Motions: Vertical, Trendelenburg (+15°/-11°), Longitudinal (10")
  Lateral (±4")

# DIRECTIONS FOR USE - FOOT CONTROLS

## ONE MOTION

Used to raise and lower height of the table.

## 3 MOTION

Used to control table Vertical Height, Trendelenburg, Lateral Tilt OR Vertical Height, Trendelenburg, Longitudinal Motion.

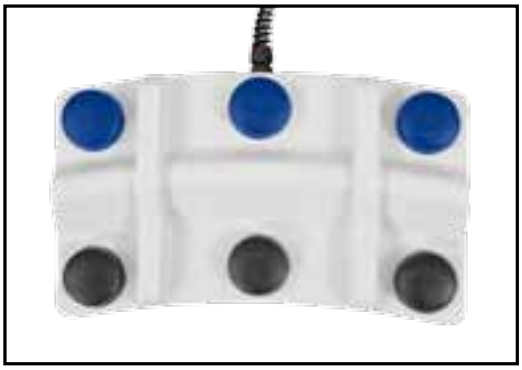

***Control functions dependent upon table's features.***

## 4 MOTION

Used to control table Vertical Height, Trendelenburg, Longitudinal Motion, Lateral Tilt OR Vertical Height, Trendelenburg, Longitudinal Motion, Lateral Motion.

***Control functions dependent upon table's features.***

# DIRECTIONS FOR USE HAND CONTROLS



## 3 MOTION

Used to control table Vertical Height, Trendelenburg, Lateral Tilt OR Vertical Height, Trendelenburg, Longitudinal Motion.

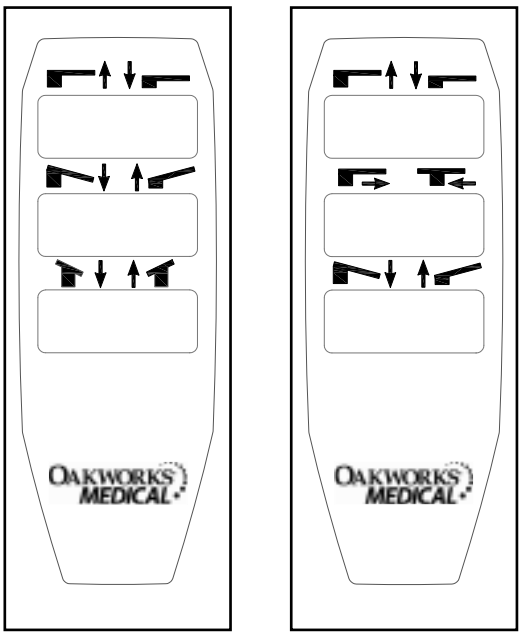


*Control functions dependent upon table's features.*

## 4 MOTION

Used to control table Vertical Height, Trendelenburg, Longitudinal Motion, Lateral Tilt OR Vertical Height, Trendelenburg, Longitudinal Motion, Lateral Motion.

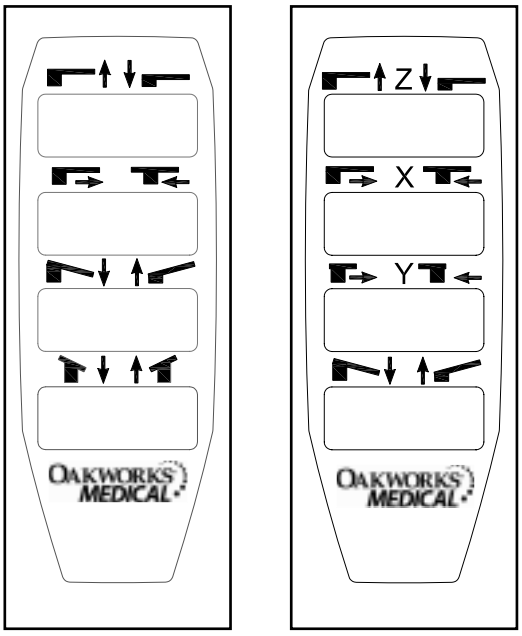


*Control functions dependent upon table's features.*

## BUBBLE LEVELS

Bubble levels are installed on the handle end of the table to aid the operator to determine the horizontal plane.

## ANGLE INDICATOR

Standard on CFLU401 and CFUR301 Tables. Optional on all other Imaging Tables.

To use angle indicator, simply press "on/off" button on the left side of the indicator.

**NOTE: Do not press "zero" unless table is in the horizontal position.**

## PATIENT POSITIONING STRAP

The Patient Positioning strap must be used during all procedures to prevent the patient from falling off the table. The strap has Velcro® attached to the ends. Strap is attached as follows:

CAUTION

Patient Safety Strap must be secured.

1. Place the center of the strap around the patient's waist. Relocate the strap as necessary for adequate clearance.
2. Take the ends of the strap down around the table top. Pull the strap snug underneath the table and press the two Velcro® ends together.
3. Check the strap to assure adequate patient restraint prior to the Trendelenburg motion.

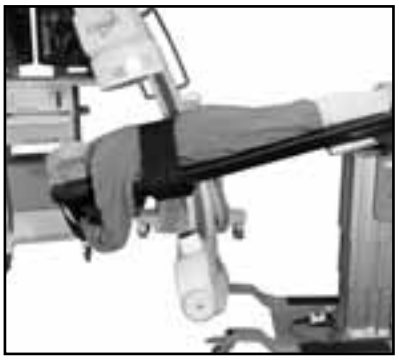

## ADJUSTING THE TABLE TOP PAD

**CAUTION**

There may be pinch points under the table. Do not have any body part under the table when the table is in motion.

Underside of Tabletop

Remove Table Pad by pulling flaps at the underside of the table on either end until the hook and loop fastener becomes unanchored.

Replace pad by first centering on the table and then pressing flaps in place, anchoring with the hook and loop fasteners.

## ADJUSTING THE CRANIAL POSITIONING PADS - INTEGRATED HEADREST TABLES ONLY

Prone Positioning: Use the Crescent Face Pad and adjust accordingly.

Pads are held in place by hook & loop fasteners.

The Crescent Face Pad can be adjusted as needed.

Place close in to the edge of the table with sides together for smaller patients or further away from the edge with sides apart for larger patients.

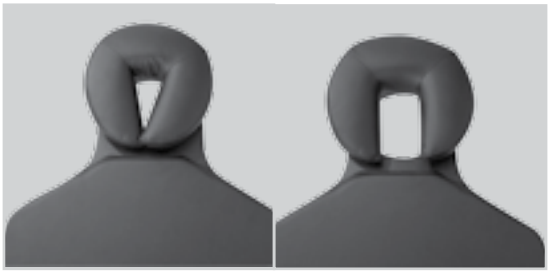

Supine Positioning: Use either the 2" or 4" square pad for proper placement.

Pads are provided that give two levels of elevation: 2" or 4"

Pads attach to the integrated face rest extension with hook & loop fasteners that hold the pad securely in place.

## MOVING IMAGING TABLE

Be sure to lower table completely before attempting to move it.

NOTE

Casters are designed for normal Hospital/ Clinic environments. Not intended for outdoor travel/use.

Unlocked Caster - Table may be moved

Push down until locking lever clicks into place.

Unlocked caster.

Locked Caster - Table locked down.

## EMERGENCY STOP

All electric tables are equipped with an emergency stop switch. To stop the operation, push the red button. To reset, rotate the red button clockwise.

## WEIGHT CAPACITY & PATIENT USE

The OAKWORKS® table top is rated at 500 lb. load evenly distributed. (Bariatric table is rated at 750 lbs.) To minimize any risk to the patient, do not allow the patient to sit on the face rest area beyond the warning line on the table top.

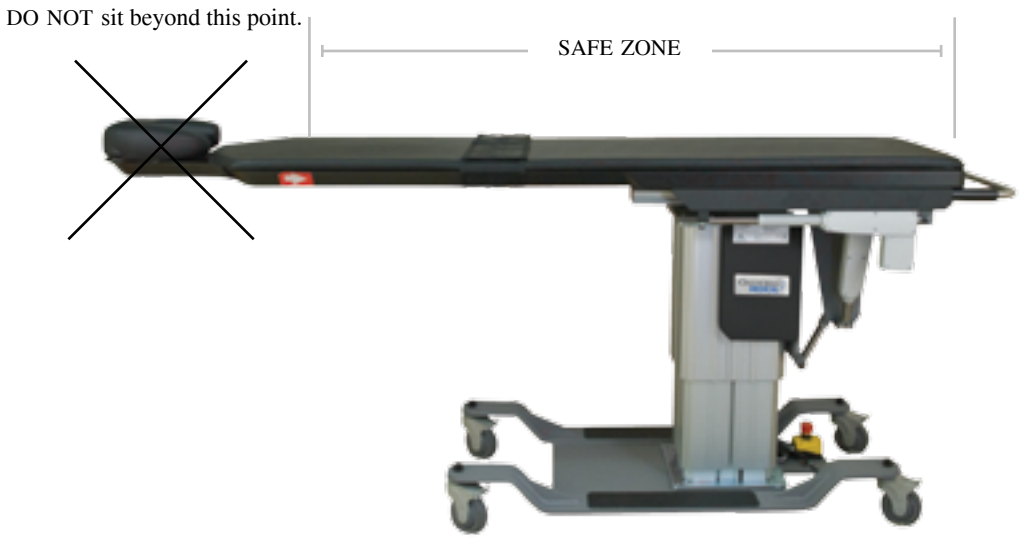


Casters should be locked when patient is mounting or dismounting the table.

Table should be flat when mounting and dismounting.

Patient should mount and dismount near the lifting column.

Table top should be moved fully to the rear after each use.

## UROLOGY TABLE BAG HOOP

Slide bag over Urology hoop.

Attach ends of hoop to the ends of the table T-rails. Tighten hoop ends to the T-rail.

Completed assembly.

## END EXTENSIONS - UROLOGY & LITHOTRIPSY/UROLOGY TOP

There are extensions which can be inserted on either end of the table.
(1) - 23" x 28" and (1) - 23" x 16" - Lithotripsy/Urology, (1) - 23" x 28" - Urology

To insert extension, simply slide the two "arms" into the ends of the table top. Push fully in. Extension arms will drop slightly into a locking pin.

To remove extension, simply lift extension slightly and pull away from table top.

## LATERAL EXTENSIONS - LITHOTRIPSY/UROLOGY TOP

There are four lateral extensions for the Lithotripsy table. (2 - 8" x 11", 1 - 8" x 14" and 1 - 8" x 24"). The 8" x 24" extension is designed to bridge the Lithotripsy opening.

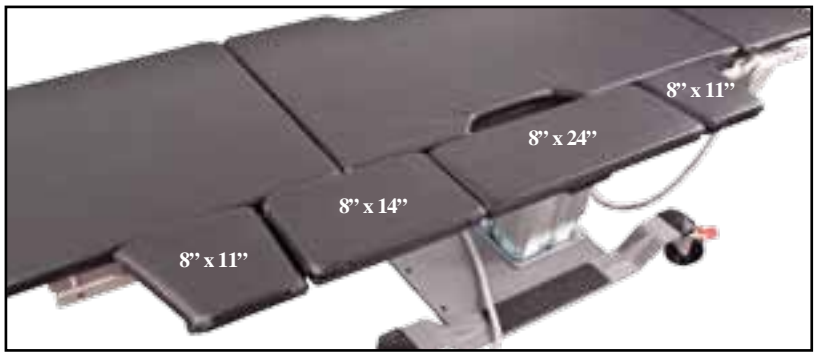


The 2 - 8" x 11" are angled and designed to be used on both sides of the Lithotripsy opening.

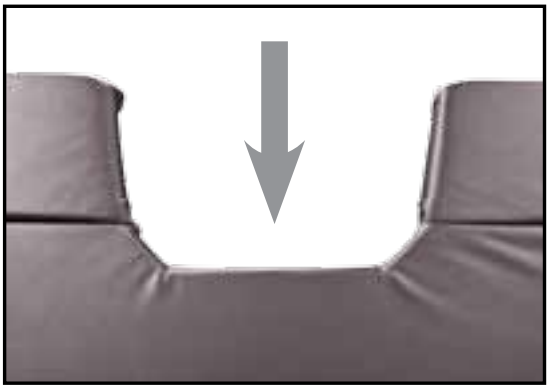

The 8" x 14" extension can be used as required for your procedure along with other extensions.

## LATERAL EXTENSIONS (CONT.)

The Lateral Extensions are clamped to the T-rail with a locking clamp design.

## LITHOTRIPSY TABLE USED AS A UROLOGY TABLE

If the extensions are removed from the Lithotripsy Table, the table can be used as a Urology Table. A bag hoop is included with your table. (Refer to Urology Table Bag Hoop directions for use).

## LATERAL EXTENSIONS - UROLOGY TOP

There are 2 lateral extensions for the Urology Table - (2) 5" x 24". These extensions can be used as required to extend the effective width of the table top.

## USABLE IMAGING AREA - CFPMFXH & CFPM100 INTEGRATED HEAD REST TOP TABLES ONLY



### CENTERED FOP A-P VIEW:

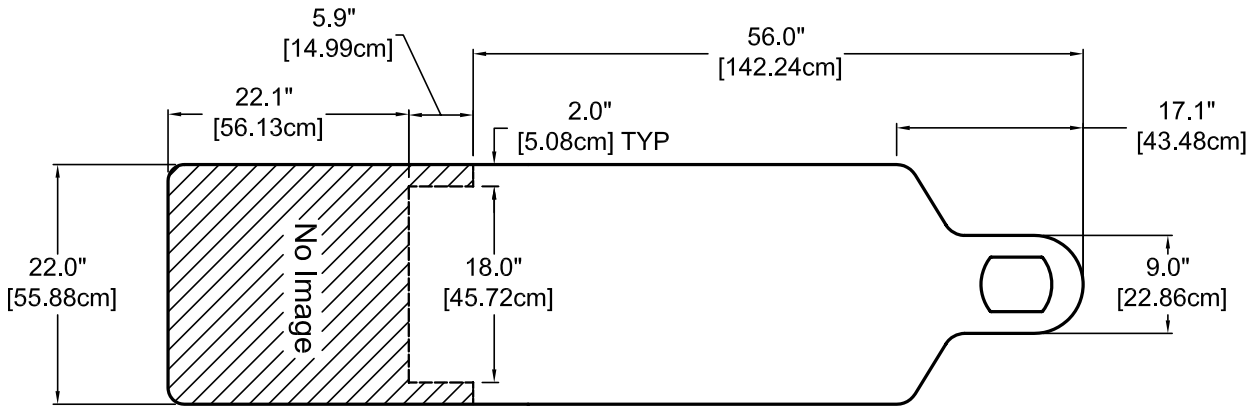


### OBLIQUE 30° VIEW FROM VERTICAL:

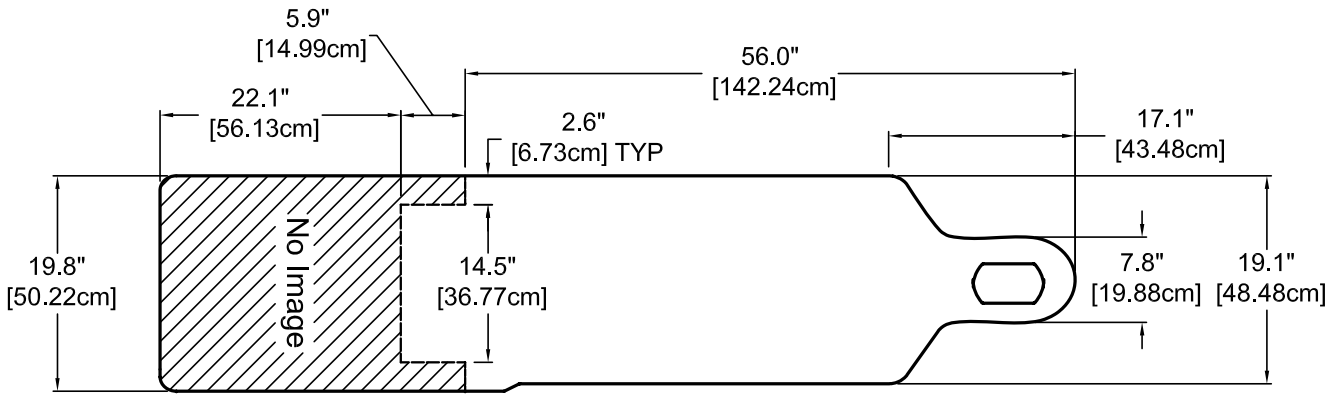


### CAUDAL 30° VIEW FROM VERTICAL:

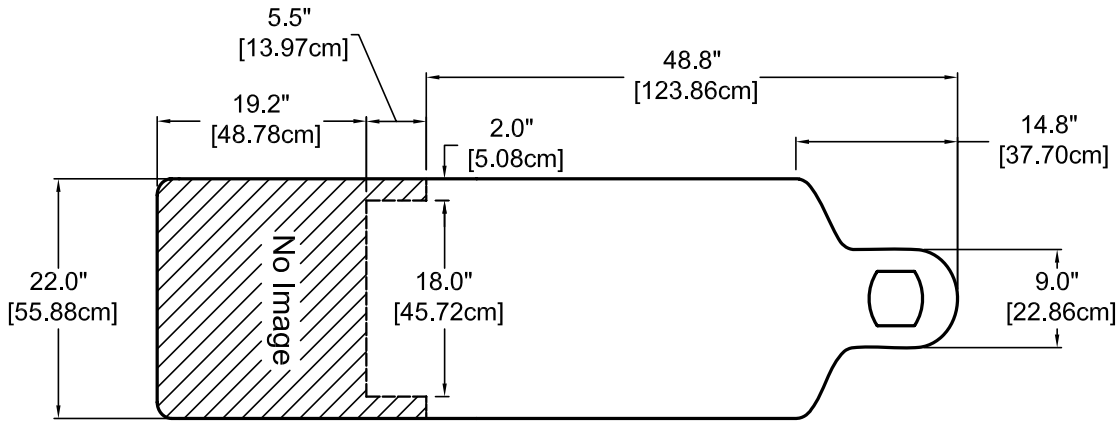

## USABLE IMAGING AREA - CFPMFXH & CFPM100 RECTANGULAR TOP TABLES ONLY

### CENTERED FOP A-P VIEW:

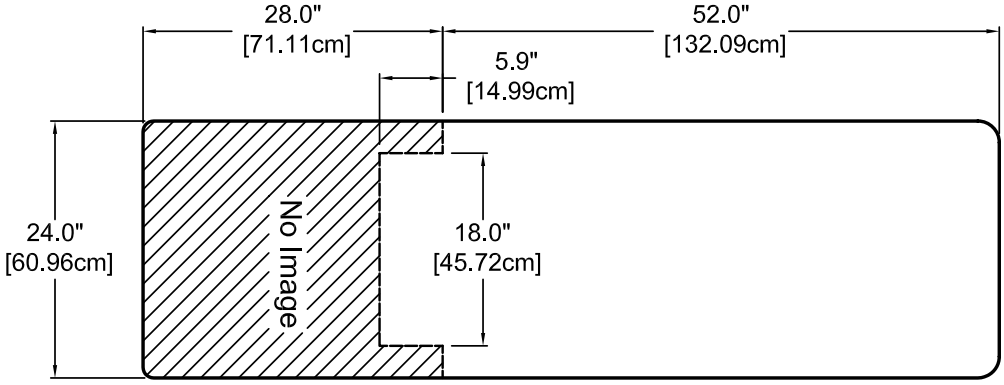


### OBLIQUE 30° VIEW FROM VERTICAL:

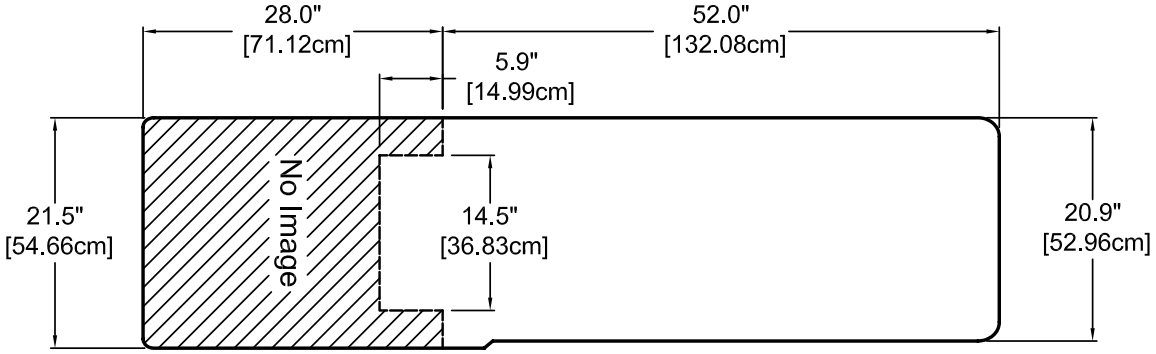


### CAUDAL 30° VIEW FROM VERTICAL:

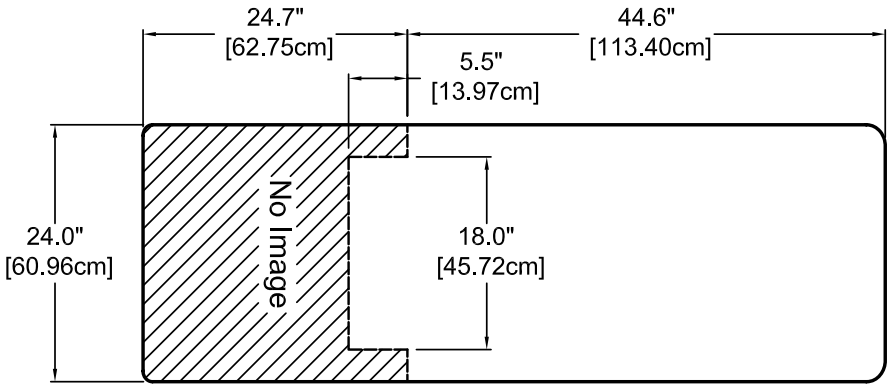

# USABLE IMAGING AREA
# CFPM400, CFPM300, CFPM401, & CFPM301
# INTEGRATED HEADREST TOP TABLE ONLY



## CENTERED FOP A-P VIEW:

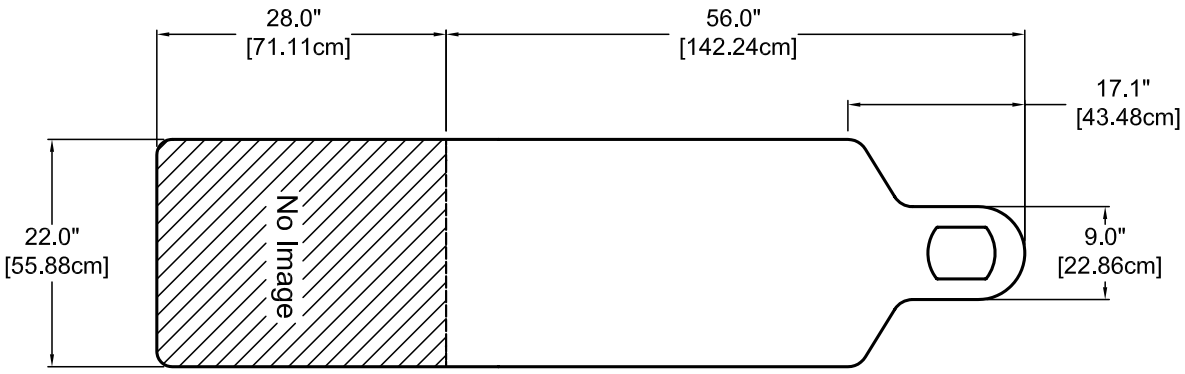


## OBLIQUE 30° VIEW FROM VERTICAL:

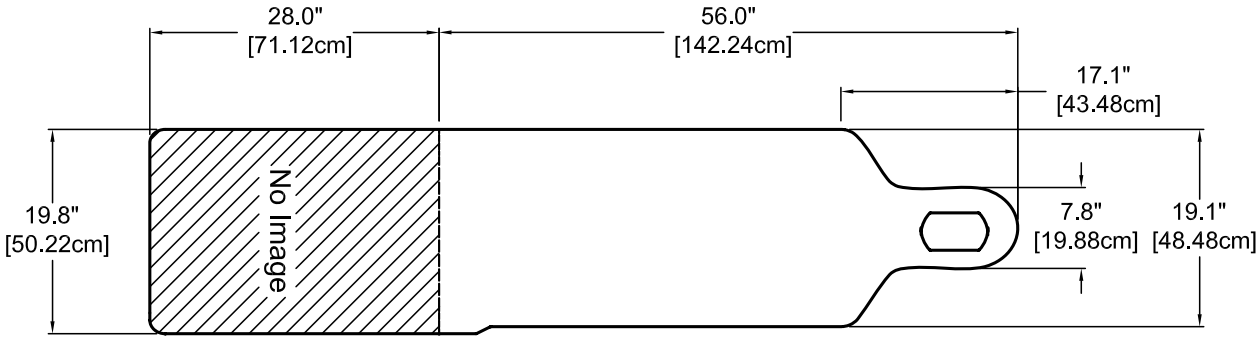


## CAUDAL 30° VIEW FROM VERTICAL:

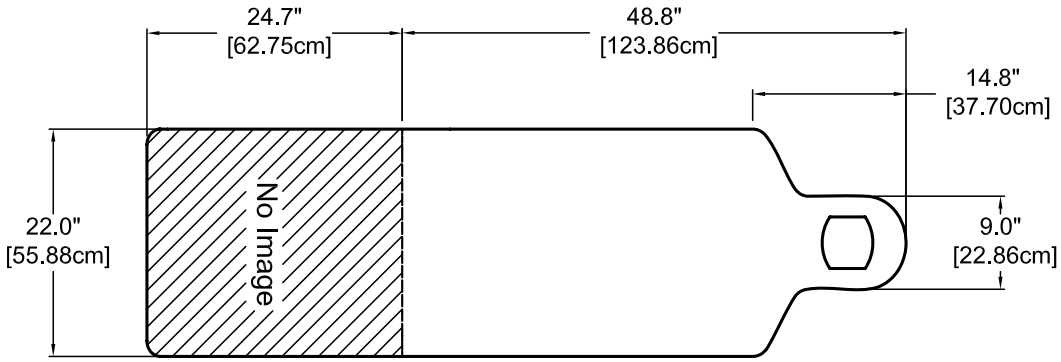

# USABLE IMAGING AREA
# CFPM400, CFPM300, CFPM401, CFPM301 & CFPMB301
# RECTANGULAR TOP TABLE ONLY

## CENTERED FOP A-P VIEW:

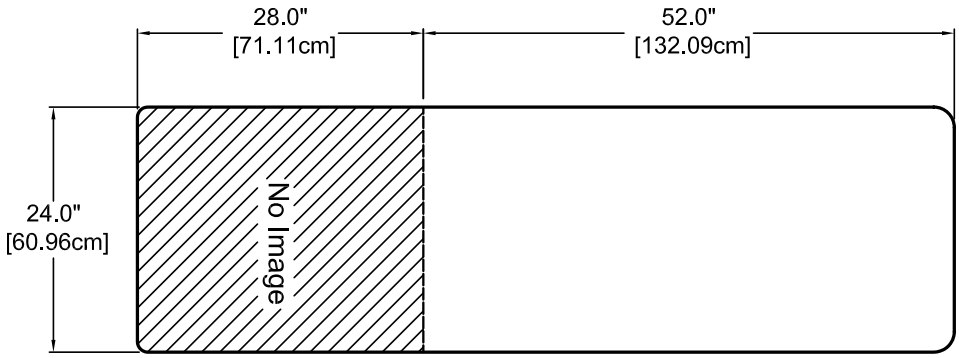


## OBLIQUE 30° VIEW FROM VERTICAL:

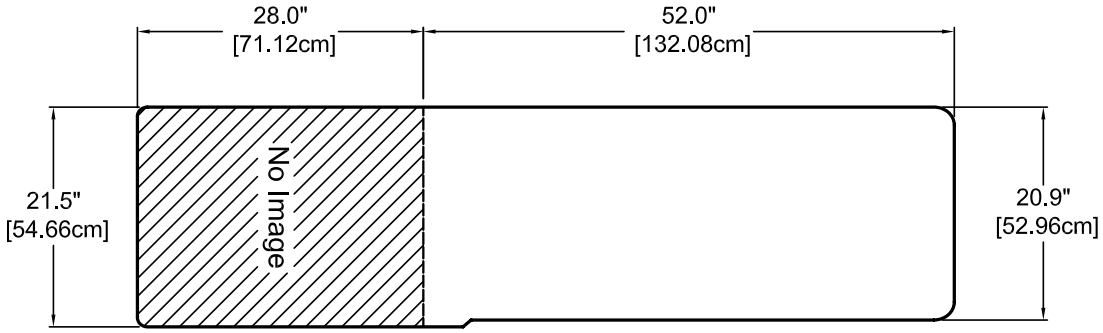


## CAUDAL 30° VIEW FROM VERTICAL:

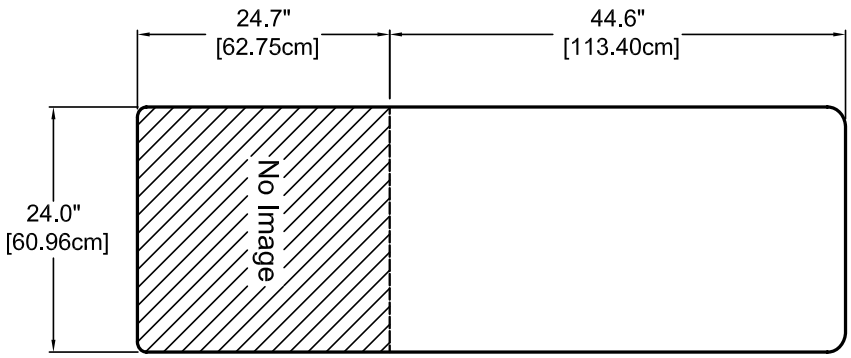

## USABLE IMAGING AREA - CFUR301 & CFUR401

### CENTERED FOP A-P VIEW:

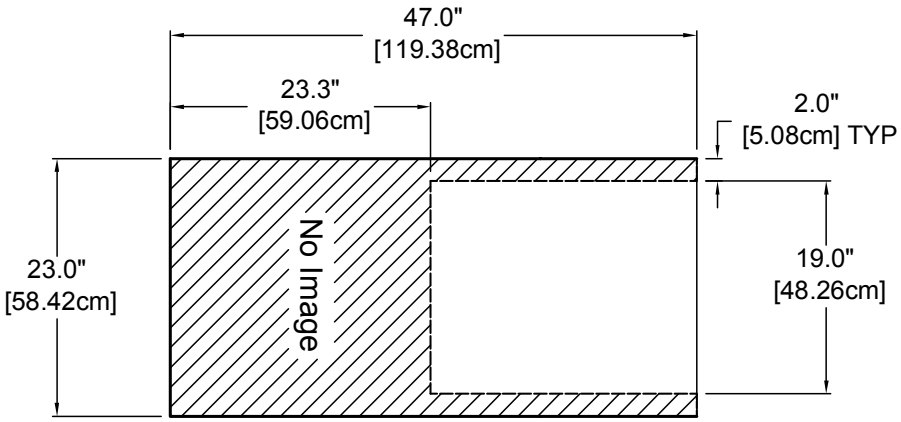


### OBLIQUE 30° VIEW FROM VERTICAL

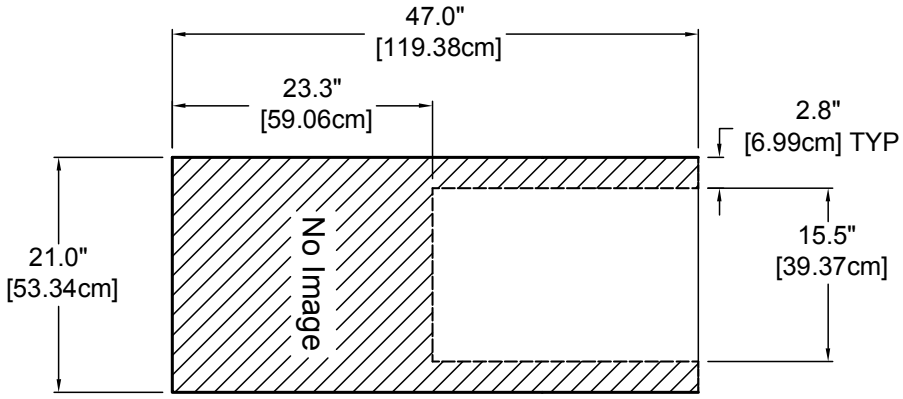


### CAUDAL 30° VIEW FROM VERTICAL:

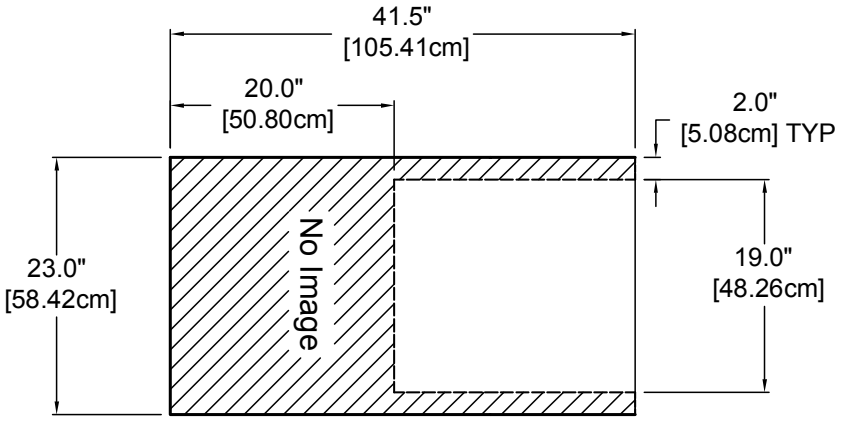

## USABLE IMAGING AREA - CFLU401

### CENTERED FOP A-P VIEW:

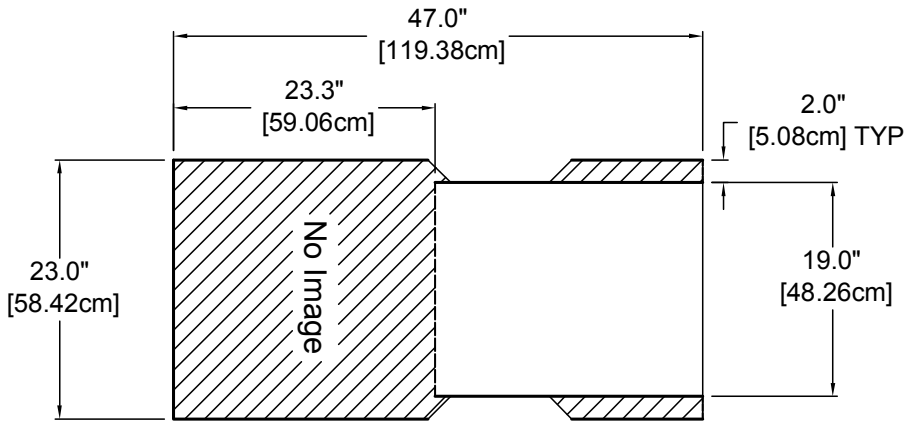


### OBLIQUE 30° VIEW FROM VERTICAL

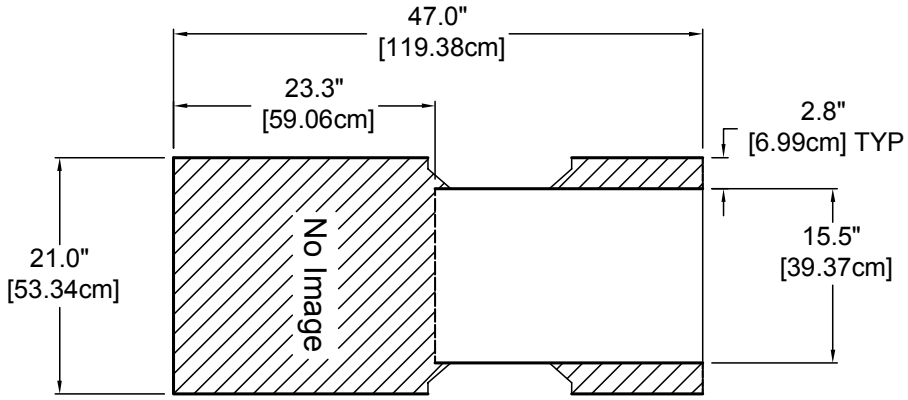


### CAUDAL 30° VIEW FROM VERTICAL:

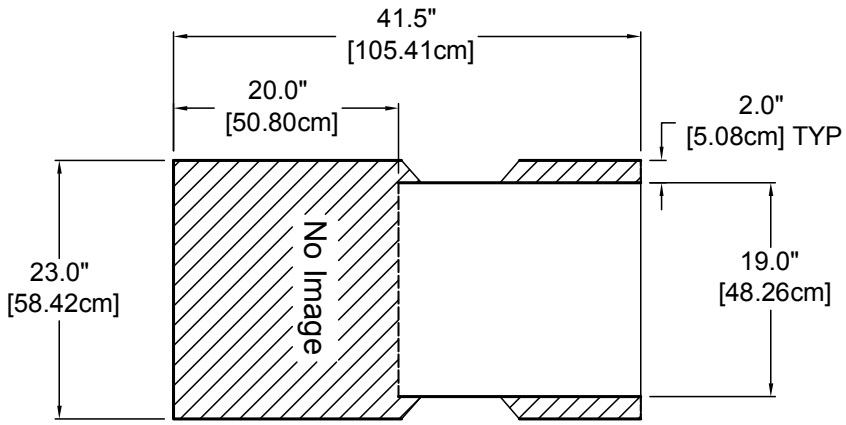

## CAUTION

When making adjustments in positioning be sure to observe all cautions and warnings given in the manual to prevent injury to both opetator and patient.

### IMPORTANT

*DO NOT* place undue weight or downward pressure on the Carbon Fiber Arm Board. It is a positioning device for the arms and should not be used as leverage to get on or off the table. Injury can occur.

## CARBON FIBER ARM BOARD

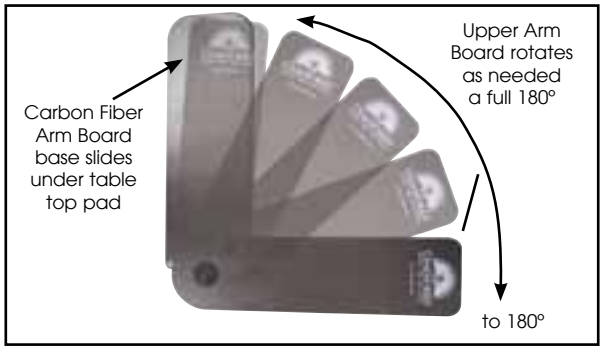

Prone Position at 135°

Supine Position at 180°

The OAKWORKS® Carbon Fiber Single Arm Board conveniently slides under the table top pad and easily supports the patient's arm in a positionary range of 180°. The unit can easily fold for compact storage when not in use.

### To use the Carbon Fiber Single Arm Board:

Unfold the Arm Board just enough to enable it to slide under the table top pad on the Imaging Table at a 90° angle to the side of the table. Ask the patient to lie down on the table. Position the patient to suit the needs of the procedure. The weight of the patient will hold the Arm Board base in place under the table top pad. Move the upper Arm Board to the angle you need. It will stay at that position until you change it.

When finished, ask the patient to rise up enough for you to move the Arm Board base from under the table top pad. Fold it up and store it away until the next time you need to use it.

## ADJUSTABLE T-RAIL CLAMP

(Intergrated Headrest & Rectangular Tops Only*)

To attach or adjust table accessories:

1. Open T-rail clamp.
2. Slide T-rail to desired location.
3. Tighten T-rail clamp.

***Note: The Integrated T-Rails are US standard size of .375" (9.5mm) thick by 1.125" (28.6mm) wide.***

*Excludes Bariatric table

## SPINE POSITIONING SYSTEM

7" X 12" RECTANGULAR ADJUSTER PADS (2)
CONTOURED TORSO SUPPORT PAD
8" X 16" RECTANGULAR ADJUSTER PADS (2)
CRESCENT FACE REST PAD
RADIOLUCENT FRAME WITH ADJUSTABLE FACE REST
CONTOURED TORSO WEDGES (2)
CARRY CASE
8" HALF ROUND BOLSTER
8" SEMI ROUND BOLSTER

### CAUTION

Children must be supervised by a responsible adult when around this equipment.

### IMPORTANT

*DO NOT* place undue weight or downward pressure on the Fluoro Extender. It is a positioning device for the arms or legs and should not be used as leverage to get on or off the table. Injury can occur.

## FLUORO EXTENDER

The OAKWORKS® Fluoro Extender is radiolucent and offers extra width only where you need it for greater positioning accuracy with optimum imaging. The Fluoro Extender is inserted under the table top pad.

## CLEANING

IMPORTANT

CAUTION

Before cleaning with any liquid cleaner be sure to unplug the power cord from the power outlet.

### TABLE

Use only a mild detergent solution or 10% sodium hypochlorite solution on surfaces. Be sure excess liquid does not drip onto any other surfaces or mechanisms. Disinfectants other than recommended above will harm the table's surface. Wipe off excess with a lint-free cloth. Remove residual with a damp (not wet) cloth.

### TABLE PAD

Clean your upholstered items when needed using a mild solution of 4:1 diluted non-alcohol cleaner such as Formula 409®, Fantastik®, Green Windex® or some other non-abrasive cleaner. For disinfecting purposes you may use Protex, MadaCide, Accell TB, Virox® (Canada) or a diluted 1/100 bleach solution. Dry the fabric immediately after cleaning to remove excess cleaning solution. Using citrus based cleaners or other strong cleaners, such as alcohol, acetone, higher concentrations of bleach or other products that contain high concentrations of these substances, can shorten the life of your fabric. Be sure underside of table pad is completely dry prior to placing back onto tabletop.

Note: Damage caused by cleaners will not be covered under the warranty.

The operator should ascertain the disinfecting properties of the agent being used prior to cleaning.

## INSPECTIONS & MAINTENANCE

IMPORTANT

Be sure to read all cautions, warnings and instructions given in the manual to prevent injury to both operator and client.

### RECOMMENDED REGULAR INSPECTIONS (monthly or local standard)

- Check for damage to the power, handset or footswitch cables.
- Visually inspect components for obvious damage that could cause problems during operation.

### RECOMMENDED PERIODIC INSPECTIONS (yearly or local standard)

- Check for damage to the power, handset or footswitch cables and all visible wiring.
- Visually inspect components for obvious damage that could cause problems during operation.
- Check all mechanical functions using the foot control. Repeat using the hand control. Check for abnormal noises.
- Replace any missing or illegible labels.
- Check that all fasteners are present and fastened securely.
- Check table grounding. (See Ground Point Testing)
- Clean unusual buildup of dirt on the table and/or parts of the table not normally cleaned on a regular basis.
- Check for tears or cracks in the tabletop pads.

### MAINTENANCE

- The angle indicator (present on some tables) uses a battery for power. This battery will need to be replaced periodically (recommended yearly). To replace the battery, remove the angle indicator from the table (it is held on with Velcro®). Unscrew the back cover, replace battery (#CR2023), replace cover. Reattach angle indicator on table, push "on/off" button on the left, move table top to a horizontal position, then hit "zero" button on the right.

NOTE: The electronics and motions do not require any general maintenance or lubrication.

# GROUND POINT TESTING & TROUBLESHOOTING



## GROUND POINT TESTING (ELECTRIC TABLES)

To confirm table grounding from the plug to the metal table, use the ground post located on the base. (Connect the tester to the ground post and the plug.)

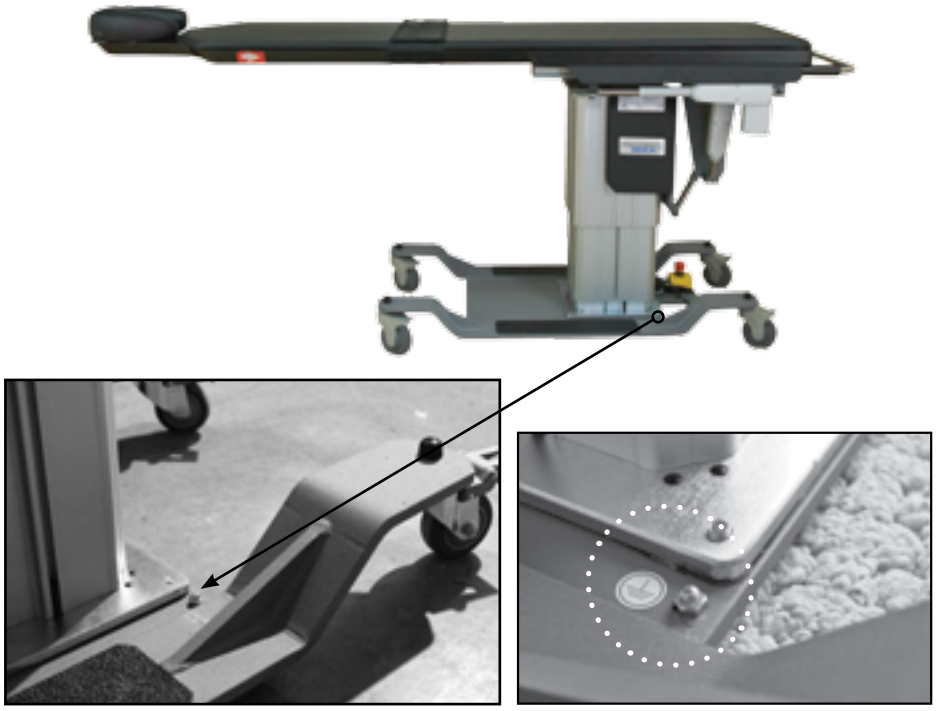

## IF THE TABLE TOP WILL NOT CHANGE POSITION

CAUTION

The Carbon Fiber table weighs as much as 475 lbs (216 kg). Turning the table on its side is not required and not recommended.

TABLE WILL NOT FUNCTION IN ANY CAPACITY:

- Check to make sure the Emergency Stop Button is not engaged. (Must be in the up position).
- Check Power Supply in the room.
- If the table still fails to operate, contact our customer service department. 717.235.6807

TABLE HEIGHT WILL NOT RAISE OR LOWER:

- Check foot pedal connection.
- If the table still fails to operate, contact our customer service department.

TABLE TOP WILL NOT OPERATE:

- Check hand control connection to the control box.
- Check actuator(s) connection to the control box.
- Check power cord connection to the control box.
- Is there a green light lit on the control box?
- If the table still fails to operate, contact our customer service department.

# TROUBLESHOOTING

## ANGLE INDICATOR DOES NOT WORK OR IS INACCURATE - (IF APPLICABLE)

1. If angle indicator will not work, the battery may need to be replaced. (See maintenance instructions)

2. If the angle indicator on the table does not read near "0.0" in the horizontal position, the indicator may need to be reset. To reset the level indicator, just push the right "zero" button on the indicator.

## FOOT CONTROL REPLACEMENT INSTRUCTIONS - ELECTRIC TABLES

Replacement of the foot control will be necessary if the foot control does not activate the correct function.

To Replace the foot control, follow these steps:

1. Before proceeding, disconnect the power cord from the power outlet.

2. Follow foot control cord back to the nearest junction connector (remove cable guides and strain relief as required). Disconnect foot control.

3. Obtain the new foot control and insert the cable plug into the junction connector until firmly seated. Reconnect strain relief and cable guides.

4. Plug the power cord back into the power outlet.

5. Attempt to operate the table functions from the Foot Control.

6. If the table functions fail to operate, contact the Customer Service Department.

## HAND CONTROL REPLACEMENT INSTRUCTIONS - ELECTRIC TABLES (IF APPLICABLE)

Replacement of the hand control will be necessary if the hand control does not activate the correct table function.

To replace the hand control, follow these steps:

1. Before proceeding, disconnect the power cord from the power outlet.

2. Follow hand control cord back to the nearest junction connector (remove cable guides and strain relief as required). Disconnect hand control.

3. Obtain the new hand control and insert the cable plug into the junction connector until firmly seated. Reconnect cable guides and strain relief.

4. Plug the power cord back into the power outlet.

5. Attempt to operate the table functions from the hand control.

6. If the table functions fail to operate, contact the Customer Service Department. 717.235.6807

## WARRANTY

### View complete warranty details at www.oakworks.com

All warranties are limited to factory-provided replacement parts, factory repair or replacement, at the discretion of OAKWORKS®. OAKWORKS® only covers parts and labor on field repair of stationary products.

All warranties exclude damage caused by improper set-up, accident, abuse, misuse, neglect, use for other than intended purpose or reasonable wear such as tears in the upholstery.

All warranties are invalidated by non-factory modifications and unauthorized repairs, which will immediately terminate all liability by OAKWORKS® for the product or damages caused by its use.

The buyer and its customers shall be responsible for proper set-up and use of the products as well as any supervision required for safety. In no event shall OAKWORKS® be liable for any special, indirect, consequential, incidental, exemplary or punitive damages or costs. Use of non-approved cleaning solutions voids the guarantee on all fabrics.

The warranties set forth herein are the sole and exclusive warranties provided by OAKWORKS®. There are no other warranties, representations or guarantees provided by OAKWORKS® either expressed or implied, including warranties of merchantability and fitness for a particular purpose. Warranty valid with proof of purchase.

## PARTS IDENTIFICATION - POWER CORD PARTS

| Plug View: | Voltage (AC) | Power Cord Plug |
|---|---|---|
|  | 120v 60 Hz | 3 prong grounded hospital grade; North America |
|  | 220v 50 Hz | Continental Plug; Europe |
|  | 220v 50 Hz | Swiss plug; Switzerland |
|  | 220v 50 Hz | British plug; United Kingdom |

# PARTS IDENTIFICATION - TABLE PARTS

| Part No. | Description |
|---|---|
| 55848 | Locking 4" Caster |
| 65190 | Locking 5" Heavy Duty Caster |
| 64649-110 | Control Box - U.S. |
| 64649-220 | Control Box - European |
| 9723-110 | Lifting Column - U.S. |
| 9723-220 | Lifting Column - European |
| 63884-110 | Lifting Column CFLU401 & CFPMB301 - U.S. |
| 63884-220 | Lifting Column CFLU401 & CFPMB301 - European |
| 55720 | Longitudinal Motion Actuator |
| 4723 | Trendelenburg Motion Actuator |
| 64653 | Tilt Motion Actuator |
| 64682 | Heavy Duty Trendelenburg Motion Actuator - CFLU401 & CFPMB301 |
| 65966 | Tilt Indicator |
| 64845 | Urology bag hoop |
| 8806 | Patient Positioning Strap |
| 53330 | Single Motion Foot Control - CFPM100 |
| 64434 | 6 Pedal Foot Control |
| 64431 | 8 Pedal Foot Control |
| 56035 | 6 Button Hand Control |
| 56035-3 | 6 Button Hand Control Face Overlay for CFPM301, CFPMB301 & CFUR301 |
| 56035-4 | 6 Button Hand Control Face Overlay for CFPM300 |
| 55721 | 8 Button Hand Control |
| 55721-1 | 8 Button Hand Control Face Overlay - CFPM400 |
| 55721-2 | 8 Button Hand Control Face Overlay - CFLU401 |
| 6411-06 | Table Top Pad - 1" x 23" x 47" - Urology |
| 6408-06 | Table Top Pad - 1" x 23" x 47" - Lithotripsy |
| 58940-06 | Table Top Pad - 1" x 24" x 80" - Rectangular |
| 9468-06 | Table Top Pad - 1" x 22" x 84" - Intergrated Head Rest |
| 4796-06 | Head Rest Pad - 2" x 12" x 12" |
| 4795-06 | Head Rest Pad - 4" x 12" x 12" |
| 2410-06 | Crescent Face Rest Pad |

## Lithotripsy/Urology Table Only

| | |
|---|---|
| 64656 | Longitudinal or Lateral Motion Actuator |
| 18051-06 | Table End Extender, Large |
| 18052-06 | Table End Extender, Small |
| 18055-06 | Angled Table Side Extender, Left |
| 18056-06 | Angled Table Side Extender, Right |
| 18053-06 | Table Side Extender, Large |
| 18054-06 | Table Side Extender, Small |

## Optional Accessories

| | |
|---|---|
| 3395-01 | Carbon Filber Arm Board |
| 4796-06 | Head Rest Pad - 2" x 12" Square |
| 3PXXXXXXXXTT | Oakworks® Prone Pillow |
| 2005 | Fluoro-Extender |
| 6427-06 | Table Top Pad - 2" x 22" x 84" - Intergrated Head Rest |
| TBD | Table Top Pad - 2" x 24" x 80" - Rectangular |
| 63336 | Clamp on T-Rail |
| SPSXXXXXXXTT | Spine Positioning System |

## WIRING DIAGRAMS

1. All 400 and 401 products use the following diagram.

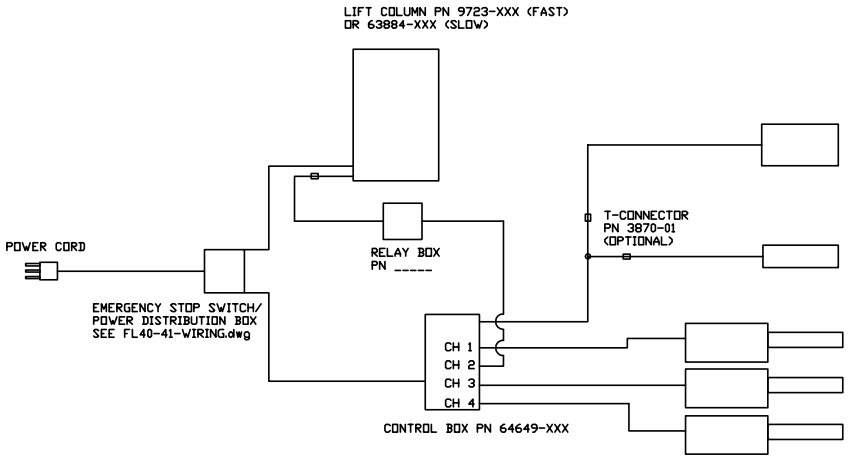


| ITEM | FL40 | FL41 |
|---|---|---|
| FOOTSWITCH | 64431 | |
| HAND CONTROL | 55721 | |
| ACTUATOR | 55720 (LONGIT TRAV) | 55720 OR 64656 (LONGIT TRAV) |
| ACTUATOR | 4723 (TREND/REV TREND) | 55720 OR 64656 (LAT TRAV) |
| ACTUATOR | 64653 (LAT ROLL) | 4723 OR 64682 (TREND/REV TREND) |

2. All 300 and 301 products are similar to the above, but have fewer actuators.

3. The CFPM100 product uses the following diagram.

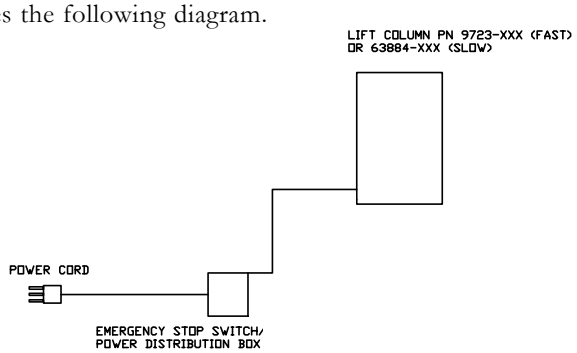


## MODEL & SERIAL NUMBER LOCATION

The label is located on the foot end of the table at the top of the lifting column as shown below. Exception: CFPM100 has the label located under the top.

## MODEL NUMBER CHART

**FL 40 IF 22 26 84 MG TT XX XX**

**Options: -** May be in any order
EU = Europe
AU = Australia
GB =United Kingdom
5C = 5" Casters

Not Used

**Fabric:** Terra Touch™

**Padding:** Comfort Foam

**Table Top Length**

**Minimum Table Height**

**Table Top Width**

**Top:**
IF = Integrated Face Rest
RT = Rectangular
BA = Bariatric
UR = Urology
LI = Lithotripsy

**Base Motion:**
10 = Vertical
30 = Vertical, Trendelenburg & Roll
31 = Vertical, Trendelenburg & Longitudinal
40 = Vertical, Trendelenburg, Longitudinal & Roll
41 = Vertical, Trendelenburg, Lateral & Longitudinal
BA = Bariatric Vertical, Trendelenburg & Longitudinal
FD = Fixed Height

**Fluoroscopy Table**

# SPECIFICATIONS

| | |
|---|---|
| Storage & Transport | Temperature: 32 - 100° F 0 - 38°C  Humidity: 60% relative humidity  Pressure: no limitations known<br>During transport, DO NOT stack containers. |
| Materials of Construction | This product contains no latex. |
| Aluminum Filtration Equivalent of Tabletop (AL mm) | This product complies with United States Department of Health and Human Services radiation performance standards, 21 CFR Subchapter J, in effect at the time of manufacture for radiographic tables.<br><br>TABLE TOPS<br>100 kVp, HVL of 3.6 mm = 1.10 (1.35 max) All Tables except Bariatric Table<br>100 kVp, HVL of 3.6 mm = 1.50 (1.79 max) Bariatric Table<br>100 kVp, HVL of 3.6 mm = 1.66 (2.00 max) All Extensions<br><br>1" TABLE TOP PAD<br>100 kVp, HVL of 3.6 mm = .88 (1.07 max)<br><br>2" TABLE TOP PAD<br>100 kVp, HVL of 3.6 mm = 1.47 (1.76 max) |
| ETL Classified | Complies with UL 60601-1; CSA C22.2 # 601.1, IEC 60601-2-32 |

## ELECTRICAL SPECIFICATIONS - CFPM100

| Designed For: | North America | Europe |
|---|---|---|
| Input Service | 120 VAC/15 amps/60Hz | 230 VAC/10 amps/50Hz |
| Current Draw | 5.8 amps | 3.0 amps |
| Maximum Momentary Current Consumption | 9.0 amps | 4.5 amps |
| Voltage to Actuators | 120 VDC | 220 VDC |
| Electric Shock Protection | Class I Equipment | Class I Equipment |
| Tabletop Applied Part | Type B Applied Part | Type B Applied Part |
| Mode of Operation | Continuous Operation @ 10% Duty Cycle | Continuous Operation @ 10% Duty Cycle |

## ELECTRICAL SPECIFICATIONS - CFPM400, CFPM401, CFPM300, CFPM301, CFLU401, CFUR401, CFUR301

| Designed For: | North America | Europe |
|---|---|---|
| Input Service | 120 VAC/15 amps/60Hz | 230 VAC/10 amps/50Hz |
| Current Draw | 8.2 amps | 4.5 amps |
| Maximum Momentary Current Consumption | 12.3 amps | 6.7 amps |
| Voltage to Actuators | 24V Top, 120V Column | 24V Top, 220V Column |
| Electric Shock Protection | Class I Equipment | Class I Equipment |
| Tabletop Applied Part | Type B Applied Part | Type B Applied Part |
| Mode of Operation | Continuous Operation @ 10% Duty Cycle | Continuous Operation @ 10% Duty Cycle |

# SPECIFICATIONS



| **Guidance and Manufacturer's Declaration - Emissions All Equipment and Systems (except FLFD)** | | |
|---|---|---|
| The table is intended for use in the electromagnetic environment specified below. The customer or user of the table should ensure that it is used in such an environment. | | |
| **Emissions Test** | **Compliance** | **Electromagnetic Environment - Guidance** |
| RF Emissions CISPR11 | Class B, Group1 | The tables use RF energy only for their internal function. Therefore, the RF emissions are very low and are not likely to cause any interference in nearby electronic equipment. |
| Harmonics IEC 61000-3-2 | Class A | The tables are suitable for use in all establishments, including domestic, and those directly connected to the public low-voltage power supply network that supplies buildings used for domestic purposes. |
| Flicker IEC 61000-3-3 | Complies | |

**Recommended Separation Distances between the portable and mobile RF Communications equipment and the Oakworks Imaging Tables for Equipment and Systems that are NOT life-supporting**

The table is intended for use in the electromagnetic environment in which radiated disturbances are controlled. The customer or user of the table can help prevent electromagnetic interference by maintaining a minimum distance between the portable and mobile RF Communications Equipment and the table as recommended below, according to the maximum output power of the communications equipment.

| Max Output Power (Watts) | Separation (m) 150kHz to 80MHz D=(3.5/V1)(Sqrt P) | Separation (m) 80 to 800MHz D=(3.5/E1)(Sqrt P) | Separation (m) 800MHz to 2.5GHz D=(7/E1)(Sqrt P) |
|---|---|---|---|
| 0.01 | .1166 | .1166 | .2333 |
| 0.1 | .3689 | .3689 | .7378 |
| 1 | 1.1666 | 1.1666 | 2.3333 |
| 10 | 3.6893 | 3.6893 | 7.3786 |
| 100 | 11.6666 | 11.6666 | 23.3333 |

# SPECIFICATIONS

| Guidance and Manufacturer's Declaration - Immunity All Equipment and Systems |
|---|
| The table is intended for use in the electromagnetic environment specified below.<br>The customer or user of the table should ensure that it is used in such an environment. |

| Immunity Test | **EN/IEC 60601 Test Level** | **Compliance Level** | **Electromagnetic Environment – Guidance** |
|---|---|---|---|
| ESD<br>EN/IEC 61000-4-2 | ±6kV Contact<br>±8kV Air | ±6kV Contact<br>±8kV Air | Floors should be wood, concrete or ceramic tile. If floors are synthetic, the r/h should be at least 30% |
| EFT<br>EN/IEC 61000-4-4 | ±2kV Mains<br>±1kV I/Os | ±2kV Mains<br>±1kV I/Os | Mains power quality should be that of a typical commercial or hospital environment. |
| Surge<br>EN/IEC 61000-4-5 | ±1kV Differential<br>±2kV Common | ±1kV Differential<br>±2kV Common | Mains power quality should be that of a typical commercial or hospital environment. |
| Voltage Dips/Dropout<br>EN/IEC 61000-4-11 | >95% Dip for<br>0.5 Cycle<br><br>60% Dip for<br>5 Cycles<br><br>30% Dip for<br>25 Cycles<br><br>>95% Dip for<br>5 Seconds | >95% Dip for<br>0.5 Cycle<br><br>60% Dip for<br>5 Cycles<br><br>30% Dip for<br>25 Cycles<br><br>>95% Dip for<br>5 Seconds | Mains power quality should be that of a typical commercial or hospital environment.<br><br>If the user of the table requires continued operation during power mains interruptions, it is recommended that the table be powered from an uninterruptible power supply or battery. |
| Power Frequency<br>50/60Hz<br>Magnetic Field<br>EN/IEC 61000-4-8 | 3A/m | 3A/m | Power frequency magnetic fields should be that of a typical commercial or hospital environment. |

# SPECIFICATIONS



**Guidance and Manufacturer's Declaration - Emissions**
**Equipment and Systems that are NOT life-supporting**

The table is intended for use in the electromagnetic environment specified below. The customer or user of the table should ensure that it is used in such an environment.

| Immunity Test | EN/IEC 60601 Test Level | Compliance Level | Electromagnetic Environment – Guidance |
|---|---|---|---|
| | | | Portable and mobile communications equipment should be separated from the table by no less than the distances calculated/ listed below: |
| Conducted RF<br>EN/IEC 61000-4-6 | 3 Vrms<br>150 kHz to 80 MHz | (3)Vrms | |
| Radiated RF<br>EN/IEC 61000-4-3 | 3 V/m<br>80 MHz to 2.5 GHz | (3)V/m | D=(3.5/E1)(Sqrt P)<br>80 to 800 MHz<br><br>D=(7/E1)(Sqrt P)<br>800 MHz to 2.5 GHz<br><br>where P is the max power in watts and D is the recommended separation distance in meters.<br><br>Field strengths from fixed transmitters, as determined by an electromagnetic site survey, should be less than the compliance levels (V1 and E1).<br><br>Interference may occur in the vicinity of equipment containing a transmitter. |

# Imaging Tables

## CONTACT INFORMATION:


### OAKWORKS® Medical Equipment

923 East Wellspring Road
New Freedom, PA 17349

Phone: 717-235-6807

FAX: 717-235-6798

**www.oakworksmed.com**

### European Authorized Representative

**Emergo Europe**

Molenstraat 15
The Hague, 2513 BH Netherlands

Tel: +31 70 3458570
Fax: +31 70 3467299

Manual Part # MMMNST0008, rev. 03.27.12

5th Edition, March 2012
4th Edition, September 2009
3nd Edition, February 2009
2nd Edition, March 2008
1st Edition, October 2007

Printed in U.S.A.